


PLAN VIEW STAPLING DIAGRAM



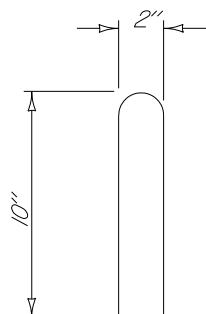


STAPLE DETAIL
(NO. 11 GAUGE)

NOTE: REFER TO GENERAL STAPLE PATTERN GUIDE FOR CORRECT
STAPLE PATTERN RECOMMENDATIONS FOR SLOPE INSTALLATION

BEGIN AT THE TOP OF THE SLOPE BY ANCHORING THE BLANKET IN 6" DEEP X 6" WIDE TRENCH.
BACKFILL AND COMPACT THE TRENCH AFTER STAPLING.

ROLL THE BLANKETS DOWN OR HORIZONTALLY ACROSS THE SLOPE.
THE EDGE OF PARALLEL BLANKETS MUST BE STAPLED WITH APPROXIMATELY 2" OVERLAP.

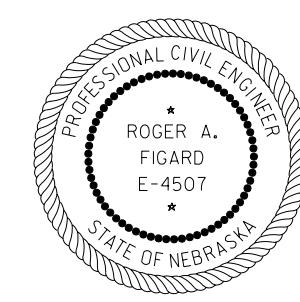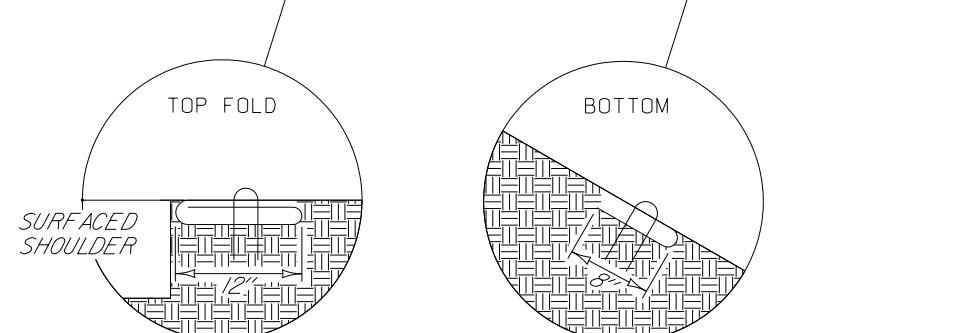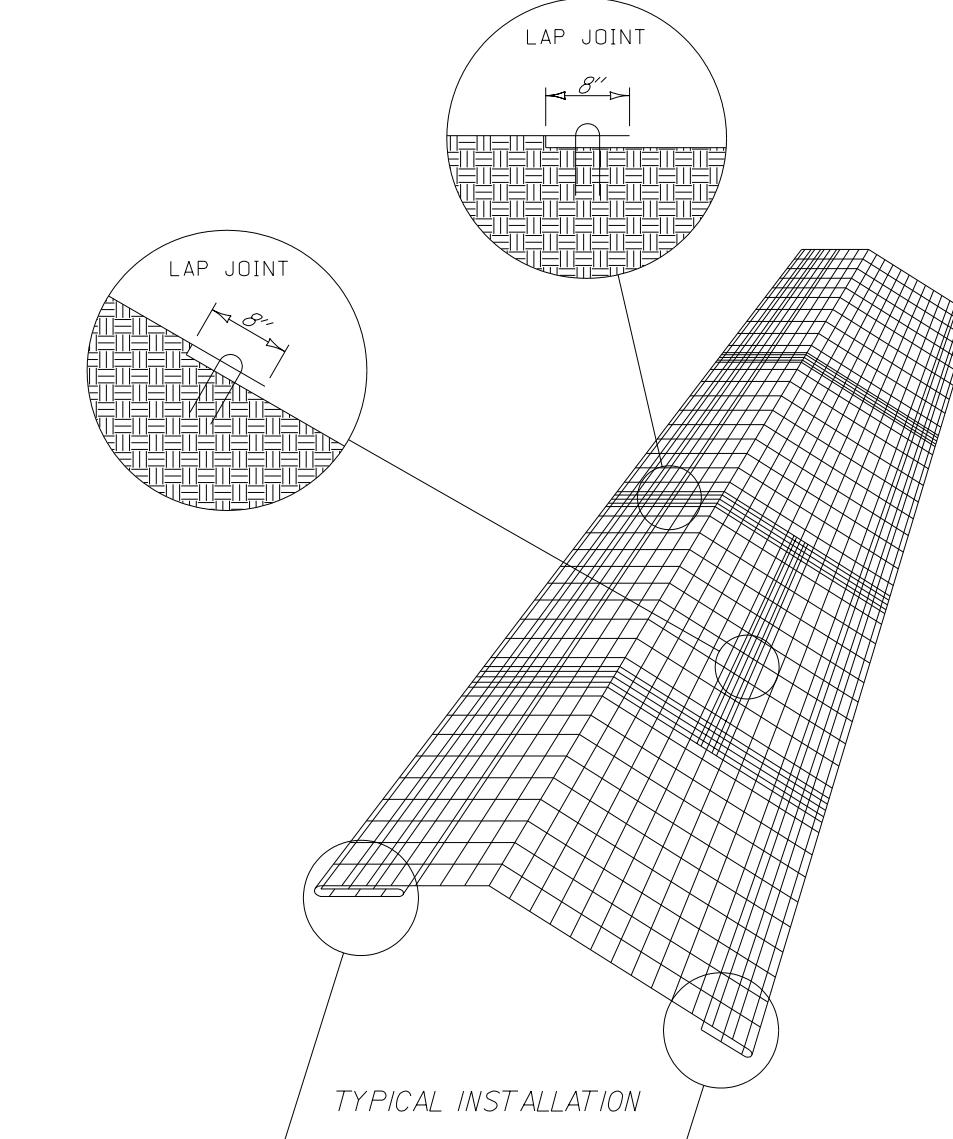

REVISIONS		
NO.	BY	DATE
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
Date:	5-03 / GLL	Scale: None
No. Sheets		
Sheet No.		

SEDIMENT AND EROSION CONTROL
TURF REINFORCEMENT BLANKET

CITY OF LINCOLN, NEBRASKA
OFFICE OF THE CITY ENGINEER

PLAN NO. L.S.P. 180